
NOTES:

- 1. REFER TO CARLISLE SPECIFICATIONS FOR PRODUCT DATA SHEETS FOR APPROPRIATE BEAD SPACING BASED UPON THE BUILDING HEIGHT, WARRANTY TERM AND ACCEPTABLE SUBSTRATE.
- 2. THE SURFACE TO WHICH ADHESIVE IS TO BE APPLIED SHALL BE DRY, FREE OF FINS, PROTRUSIONS, SHARP EDGES, LOOSE AND FOREIGN MATERIALS, OIL AND GREASE. AREA SHOULD BE CLEANED WITH AN AIR BLOWER.
- PREVIOUSLY UNEXPOSED ASPHALT 3. OR RESIDUE MUST BE PRIMED WITH CARLISLE CAVGRIP, 702 OR 702LV PRIMER.
- SEAL ALL GAPS IN THE CONCRETE DECK WITH CARLISLE 725TR OR OTHER SUITABLE MATERIAL TO AVOID CONDENSATION ISSUES OR FILL WITH CARLISLE INSULATION ADHESIVE.
- 5. AT THE BEGINNING OF THE INSULATION ATTACHMENT PROCESS AND PERIODICALLY THROUGHOUT THE DAY, CHECK THE ADHESION OF BOARDS TO ENSURE A TIGHT BOND IS CREATED AND MAXIMUM CONTACT IS ACHIEVED.
- ALL BOARDS SHOULD BE WEIGHED 6. DOWN AND SLIT TO CONFORM TO THE CONTOURS OF THE SUBSTRATE.

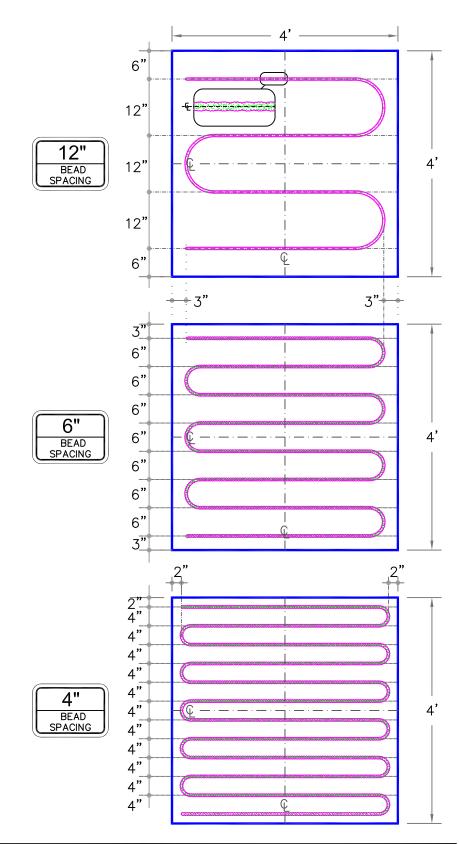

FEET TO MILLIMETERS										
4'	8'									
1219	2438									

	INCHES TO MILLIMETERS																			
inch	1/8"	1/4"	15/32"	1/2"	5/8"	3/4"	1"	1.5"	2"	2.5"	3"	4"	6"	8"	9"	11"	12"	18"	24"	36"
mm	3	6	12	13	16	19	25	38	51	63	76	102	152	203	229	279	305	457	610	914

 (\times) FASTENER & PLATE CENTER LINE → GUIDE LINE → FOAM ADHESIVE

INSULATION/ COVER BOARD ATTACHMENT USING BEAD **ADHESIVE**



DETAIL NO. A-27G ADHERED SYSTEM

For additional information, refer to Specifications